

## Model Identification

In most sections of this manual, the individual models are identified by the chassis type instead of the model designation. The chassis type designations are the first six digits of the chassis number (see page 005/2).

For example, sales designation model 280 E is chassis type 123.033.

In some instances, only the first three digits (123) will be referred to. In this case, this section applies to all vehicles of this particular chassis type.

## Location of Specific Repair Instructions

Locate main component group in Group Index. The group number is listed in the upper outside corner of each page within the group.


Check group contents, first page of each group, for the exact job description required. The job numbers, succeeded by page numbers within each group are listed in the lower portion of the individual pages.

Unit Version 0 in the various Groups is general information applicable to the pertinent unit.

Unit Version with a *different numeral* is specific information for the title vehicle.

Depending on the unit installed in the vehicle, the numeral for the unit version may vary in the different groups.

Example:

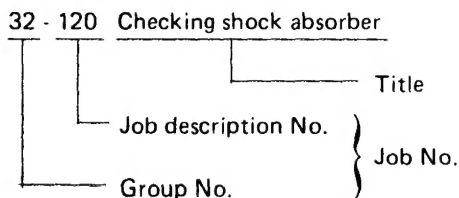

Data, adjusting values, processing dimensions, tightening torques and tools are listed at the beginning of each Section.

All the dimensions are in millimeters (mm), provided no other unit of measure is used.

The indicated part numbers are serving exclusively for identification and better differentiation of individual versions. When ordering spare parts, the part numbers must always be taken from the respective spare parts literature.